
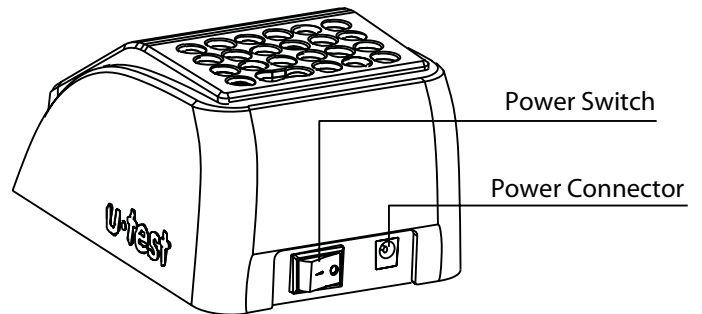


maxill u-test Incubator - Manual

(1) Description

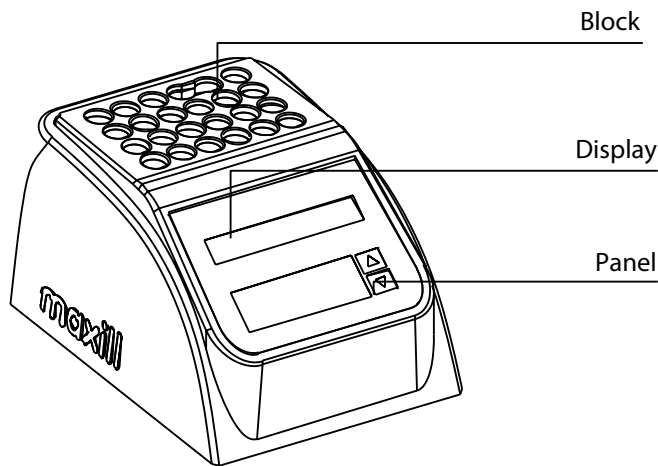

(1.2) Installing The Device



(1.2.1) Place the incubator on a level and horizontal surface.

(1.2.2) Insert the column connector of the adapter into the device, then plug the adapter into a wall outlet.

(1.2.3) Power ON the main switch. The incubator is ready to operate when the display becomes visible.

(1.3) Crushing a SCBI

(1.3.1) Insert one third of the way into crusher and push side-ways to break the vile.

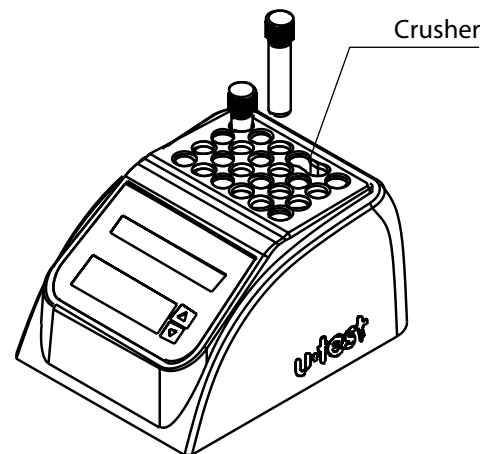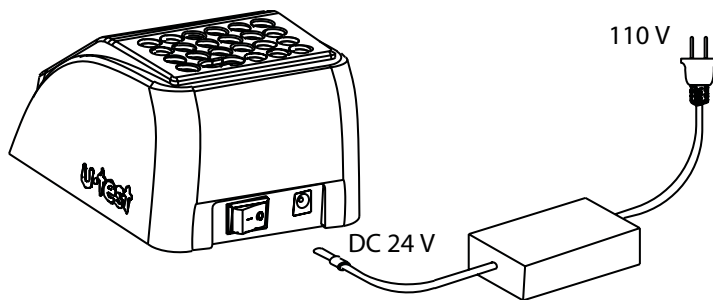

(2) Technical Data

Model	u-test
Power supply	DC, 24 V
Power	35 W
Temperature range	20°C ~ 80°C
Accuracy of the temperature	≤ ± 0.5°C
Display accuracy	0.1°C
Heating time (from 20°C to 80°C)	≤ 10min
Ambient temperature	5°C ~ 35°C
Dimensions (WxDxH)	110 mm x 150 mm x 85 mm
Weight	0.65 kg

(3) Safety Precautions



Read this manual completely before operating.



Opening or tampering with the unit will void the manufacturer's warranty and may cause electrocution.



The unit should be stored and operated in a clean, dry place at ambient room temperature. The unit should be shielded from exposure to direct sunlight, strong lamps, corrosive materials, magnetic fields and heat sources.



The main power switch is located on the rear of the unit. Push "I" to power on the unit and push "O" to power off the unit.



The power connector is on the rear of the device, **DC, 24 V** input, inside is "+", Outside is "-".



Turn the power off when the unit is not in use. If the unit will not be used for an extended period of time, remove the power cord/adaptor and cover the unit to shield it from contaminants.

(4) Operation Guide


(4.1) Control elements

▲▼ for setting the temperature.

(4.2) Setting temperature

Press and hold ▲ or ▼ until the cursor appears, then press ▲ or ▼ to adjust the temperature.

Wiring Diagram for Incubator

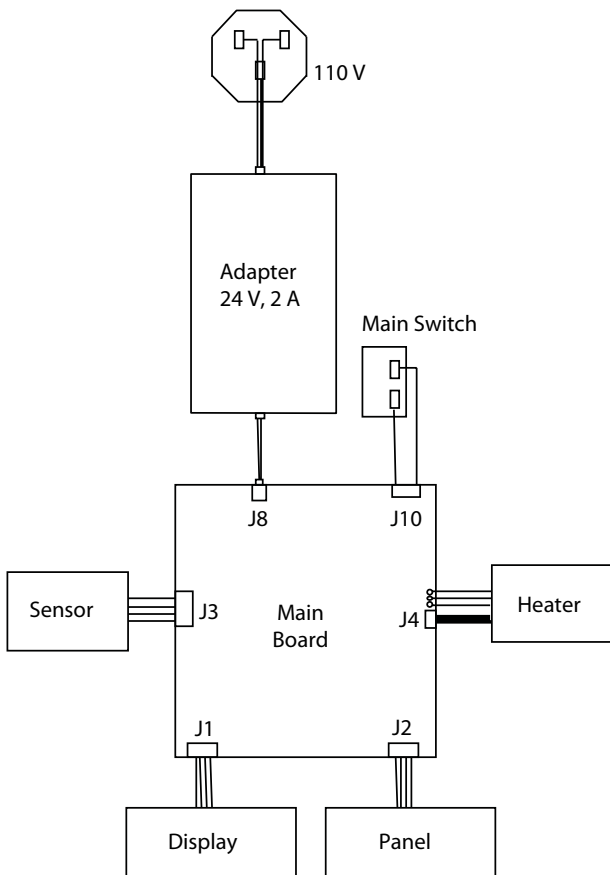

Packing List

Item	Type	QTY
Incubator	u-test	1
Adapter	24 V, 2 A	1
Manual		1