

## **Important Notes Regarding your Machine III Vacuum Former Operation:**

There are some minor differences from the unit you received and the unit identified in the instruction manual.

- 1.) There are no longer two separate toggle switches for the heater and vacuum- they are now both operated by one three position switch.


The Left position operates the Heater, Center position is OFF and the Right position is for Vacuum Operation.

- 2.) The knobs are different from those shown in the pictures within the manual. The Left handle hole contains a plug that will need to be removed prior to initial operation of the machine. The purpose of this plug is to hold the locking pin in the hole during shipment. Simply remove the plug and screw in the handle. Fastening the handle will lock the plates in place at any desired height. The handle will not be perfectly flush with the casting. When raising the plates to the upper position for heating, tightening of the left handle by turning the knob towards you will lock the plates in place, simply unscrew slightly to lower.



New Style Handle

New Locking Pin –installed in hole at factory-held in place with a removable plastic plug

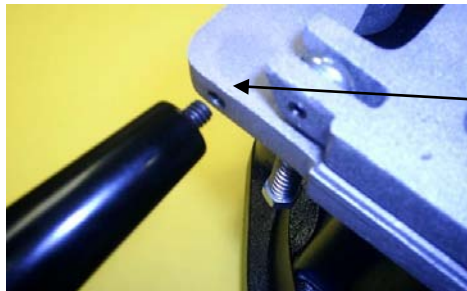

First, remove the plug cap from this hole in the material plate casting then screw in the knob.



In the unlikely event the locking pin should come out of the hole, simply re-insert with the white plastic tip facing inward toward the post.