Best Practices In Steam Sterilization

maxill

Gravity Displacement Steam Sterilizer

Tuttnauer - 2340M, 2540M, 2540MK, 3870M, Valueklave - 1730

Dynamic Air Removal For Steam Flush Pressure Pulse (SFPP)

Tuttnauer - EZ9, EZ10, EZ10K, 3870EA, Midmark - M3, M9, M11, Scican Statim - 2000, 2000 G4, 5000, 5000 G4

BI + TYPE 5 IN A PCD & CONTROL DAILY (Loads containing implantable devices must also be monitored with a BI and quarantined)



u·test PCD
Process Challenge Device
ITEM #81155 - #81158



u·test BI
Biological Indicators
ITEM #81150



u·test
Incubator
ITEM #81120

TYPE 5 INTEGRATOR IN EVERY LOAD (BATCH MONITORING)

(Best practice includes a type 5 in every cassette and package.
Type 5 in every package may vary depending on geographical location)



u·test SI LR
Integrating Package Monitoring Indicators
ITEM #81125

POUCH with external type 1 indicator & internal type 4

(Use a type 5 indicator in every pouch if required by local regulations)

Or

WRAP with external type 1 indicator & internal type 5

(Use with maxill Autoclave Tape and Type 5 Integrators)




steri-SOX™
Sterilization Pouches
10 SIZES TO CHOOSE FROM (see catalogue for sizes)



SAFEGUARD
Sterilization Wrap
SMMS & PAPER (see catalogue for sizes)

LABEL your package for easy identification (Labels are pre-printed with the required fields to be affixed prior to sterilization. Labels are heat tolerant.)

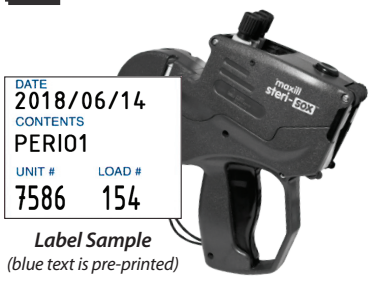

Label Sample
(blue text is pre-printed)

steri-SOX™
Quick Label System
LABELER - ITEM #91140
LABELS - #91141



Label Sample
(blue text is pre-printed)

steri-sox ID+™
Quick Label System
LABELER - ITEM #91145
LABELS - #91146

MP-REF-81121D
Rev.1: 2019-04-10

Best Practices In Steam Sterilization

Dynamic Air Removal Pre-Vacuum (Class B)

Scican Bravo, Adec Lisa, Tuttnauer Elara 11

maxill

AUTOCLAVE WARM-UP CYCLE DAILY (Complete a warm-up cycle with an empty chamber at the start of each day)

TYPE II BOWIE-DICK TEST DAILY

(Test daily after warm-up cycle in an empty chamber)



u·test BDS

Bowie-Dick Simulation Test
ITEM #81190

Bowie-Dick Simulation Test Strips (TYPE II)
ITEM #81191

BI + TYPE 5 IN A PCD & CONTROL DAILY (Loads containing implantable devices must also be monitored with a BI and quarantined)



u·test PCD
Process Challenge Device
ITEM #81155 - #81158



u·test BI
Biological Indicators
ITEM #81150



u·test
Incubator
ITEM #81120

TYPE 5 INTEGRATOR IN EVERY LOAD (BATCH MONITORING)

(Best practice includes a type 5 in every cassette and package.
Type 5 in every package may vary depending on geographical location)



u·test SI LR
Integrating Package Monitoring Indicators
ITEM #81125

POUCH with external type 1 indicator & internal type 4

(Use a type 5 indicator in every pouch if required by local regulations)

Or

WRAP with external type 1 indicator & internal type 5

(Use with maxill Autoclave Tape and Type 5 Integrators)




steri-SOX™
Sterilization Pouches
10 SIZES TO CHOOSE FROM (see catalogue for sizes)



SAFEGUARD
Sterilization Wrap
SMMS & PAPER (see catalogue for sizes)

LABEL your package for easy identification (Labels are pre-printed with the required fields to be affixed prior to sterilization. Labels are heat tolerant.)

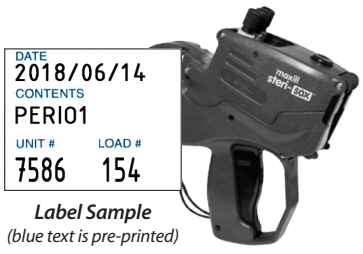

Label Sample
(blue text is pre-printed)

steri-SOX™
Quick Label System
LABELER - ITEM #91140
LABELS - #91141



Label Sample
(blue text is pre-printed)

steri-sox ID+™
Quick Label System
LABELER - ITEM #91145
LABELS - #91146