


# steri-sox <sup>TM</sup> ST


## IC Glass Keyboard Wired

### Instructions for Use

The steri-sox ST IC Glass Keyboard is designed for easy plug-and-play use. Simply use the provided USB cable to connect the keyboard to your computer/device.

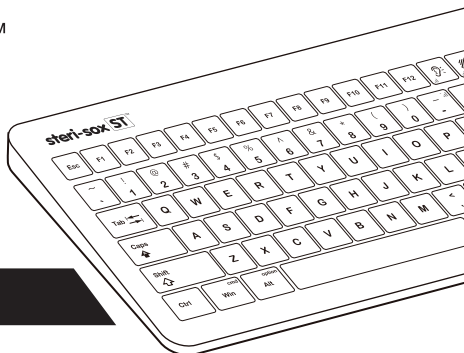

### Keyboard Layout

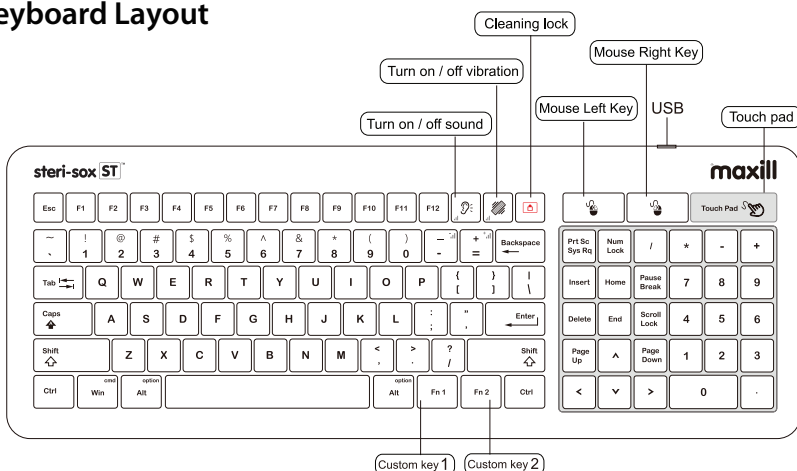

#### Touch Tone Controls



On/Off



Increase Tone Volume



Decrease Tone Volume

#### Touch Vibration Controls



On/Off




Increase Touch Vibration



Decrease Touch Vibration

USB Cable



Manual



Cleaning Lock (hold for 5 seconds to engage)

Touch Pad


Turn on/off touch pad

## Care and General Cleaning Instructions


- Do not allow any heavy objects to be placed on the keyboard, because this may cause damage to the keyboard.
  - The screen is made of glass. Please avoid dropping, strong impact and severe vibration.
1. To avoid accidental keystrokes, entering, or deleting important data, press and hold the cleaning lock key  for 5 seconds (a light on the key will illuminate when the lock is engaged).
  2. Clean the surface of the keyboard by wiping away dirt and organic solids using a compatible disinfectant wipe or spray. Re-wipe or spray the surface with disinfectant. Allow the disinfectant to remain on the surface until the appropriate contact time has been achieved (refer to the disinfectant's directions for use to determine the contact time.).
  3. Either wipe with dry cloth or shake gently and allow to air dry.

## Touchpad Gesture Guide


The keyboard touchpad area supports multi-finger gestures as below:

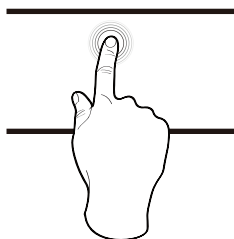

One finger gesture will move the cursor around the screen.

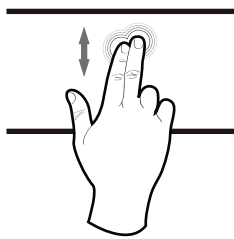

Two finger gesture will scroll the page.

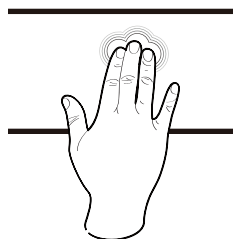

Three finger gesture will drag an object around the screen.

## Specifications

- Model No. : 91270
- Dimensions: 436 x 160 x 20 mm
- Key Size: 18 x 18 mm
- Colour: White
- Material: Tempered Glass + ABS
- Connection Method: USB
- Supported Systems: Windows, Mac OSX