

TROUBLESHOOTING THE maxi-cav™

■ Unit does not operate (“power on” indicator does not light):

- Transformer cable disconnected from wall outlet or scaler. Reconnect properly.
- Wall outlet not live. Reconnect properly.
- Foot Pedal or cable is damaged. Contact maxill.
- Unit fuse has failed. Contact maxill.

■ Insert does not vibrate properly:

- Faulty, damaged or worn insert. Replace.
- Insert not correctly seated in handpiece. Reinsert properly.
- Power control not correctly adjusted. Readjust.

■ Excess heat at handle or tip of insert:

- Faulty, damaged or worn insert. Replace.
- Too little water flow. Insert may be blocked. Inspect and clear blockage, or replace insert.
- Power too high for the amount of water. Increase water flow.
- Excessive hand pressure applied. Correct technique.

■ No water spray when foot pedal is depressed:

- Water line blocked or kinked. Correct.
- Water passage in the scaling insert clogged. Inspect and clear blockage, or replace insert.
- Water filter clogged. Replace.
- No water supply connected. Correct.

■ Insert does not go into handpiece:

- Insert stack is bent. Straighten plates carefully by hand and reinsert.
- O-ring is too tight. Lubricate O-ring with water and use twisting motion to seat insert.
- Autoclavable handpiece sheath is not attached to handpiece.

■ Insert falls out of handpiece or water leaks from front of handpiece:

- O-ring damaged or worn. Replace O-ring on insert and/or handpiece.

■ Insert comes out of handpiece when pedal is depressed:

- Water pressure is too high. Adjust water pressure to 15-35 psi at dental unit connection or in floor junction box, or replace insert O-ring.

■ Water leaks at base of handpiece:

- Orange O-ring at end of handpiece is missing or damaged.

USER MAINTENANCE AND AUTHORIZED SERVICE

- The maxi-cav™ requires very little maintenance for years of trouble-free operation. There are no user-serviceable parts inside the control unit or the foot pedal. Opening the cases will void all warranties. Authorized maxill personnel must make all internal repairs.
- maxill urges all scaler users to monitor the condition of the water filter periodically and change the filter whenever noticeable darkening of the disk occurs, or when water flow decreases. The most common reason for service for ultrasonic scalers is failure by the user to periodically change the water filter. This will result in contamination and clogging of the internal water components.
- The ultrasonic inserts, handpiece sheaths, power supply, water filter and water hose are all detachable and may be replaced by the user. Contact maxill for a list of authorized inserts and available replacement parts.
- Equipment needing service in Canada and the US should be returned, freight pre-paid, via approved common carrier (e.g. USPS, UPS, FedEx), and adequately insured. Return all accessories with the unit, and include an explanation of the problem. Pack in the original box, add plenty of cushioning material, and overbox the unit during shipping. Transit should maintain a dry temperature of 50°F-110°F. You will be contacted for your approval of the repair, along with any associated costs, prior to any work. The unit will be repaired and returned to you.
- Outside Canada and the US, repairs must be made by a maxill-authorized facility.

Please contact us if you have any questions or problems with the installation or use of your maxi-cav™

Canada

1-800-268-8633 from 8:00 AM to 5:30 PM
Eastern Time (Monday to Friday)

USA

1-855-462-9455 from 8:00 AM to 5:30 PM
Eastern Time (Monday to Friday)

Outside of the USA or Canada

519-631-7370 from 8:00 AM to 5:30 PM
Eastern Time (Monday to Friday)

WARRANTY

This warranty is in lieu of all warranties of merchantability, fitness for purpose or other warranties, express or implied. maxill warrants the maxi-cav™ power unit, transformer and foot pedal for two (2) years. The handpiece, handpiece cable and water hoses are warranted for one (1) year. The ultrasonic inserts and autoclavable sheaths are not covered by this warranty, and are not returnable.

maxill maxi-cav™ scalers which are claimed to be defective based on improper performance with non-maxill inserts, and found by us to function properly with maxill maxi-cav™ inserts, will not be repaired, replaced, or considered for return, exchange, replacement or credit/refund; such devices will be returned to the customer at the customer’s cost and the customers shall be responsible for maxill’s costs associated with inspecting the device.

No repairs or parts replacements made during a warranty period extend the warranty beyond the original expiration date. maxill does not accept liability for any loss or damage, direct, consequential or otherwise, arising out of the use of or the inability to use the product herein described. Before using, the user shall determine the suitability of the product for its intended use and the user assumes all risk and liability whatsoever in connection herewith.

If you purchased this product directly from maxill, your unit is automatically registered. Your invoice is your “Warranty Registration” receipt.

CAUTION: RX ONLY
This manual, in whole or in part, should not be considered a substitute for formal training in Ultrasonic Scaling. Appropriate professional education is STRONGLY RECOMMENDED prior to using this device clinically.

maxi-cav™ 25K/30K

DUAL FREQUENCY ULTRASONIC SCALER

DEVICE DESCRIPTION

The maxill maxi-cav™ is an autotune magnetostrictive ultrasonic tooth scaler that operates at either 25 KHz or 30 KHz. The maxi-cav™ automatically detects whether the handpiece contains a 25 KHz or 30 KHz insert, and switches to the correct operating frequency. The maxi-cav™ has an expanded low-power range to improve patient comfort during debridement, and a power-boosting, user-controlled Turbo feature to increase scaling power when needed for heavy deposits. The maxill maxi-cav™ is designed to work with maxill maxi-cav™ inserts. While other manufacturers claim to produce inserts that are compatible, maxill cannot guarantee proper performance. Please see our Warranty Policy for additional information.

INTENDED USE/INDICATIONS:

For removal of calculus, plaque and oral debris from teeth during dental prophylaxis/scaling.

CONTRADICTIONS TO USE

Because of the potential for electromagnetic interference, this device should not be used on patients or by clinicians with cardiac pacemakers, internal defibrillators, intracorporeal fluid pumps or any other implantable electronic devices, or in close proximity to sensitive patient monitoring devices such as pulse oximeters.

WARNINGS

- The water supply to the scaler should always be turned off whenever the device is being connected, disconnected, or when not in use.
- The power supply line cord functions as the AC power disconnect device for the scaler.
- The transformer should be located above and away from any sources of water that may enter the unit. As with all electrical devices, the unit should not be immersed in water or other liquids. Do not reach for the device if it has fallen into liquid until power is disconnected, and do not use the device after it has fallen into liquid. Return the device to maxill for servicing.
- Modification of this device will void the warranty, and may violate safety codes, endangering the patient and/or the clinician.
- This equipment is not suitable for use in the presence of a flammable anesthetic gas mixture (when used along with air or oxygen).
- This equipment produces electromagnetic energy and may cause interference with other nearby electronic devices. Should this occur, changing the position or location of the device may be necessary.


maxill inc.

www.maxill.com 1-800-268-8633

Manufactured for: USA: maxill inc. Cortland, OH 44410 USA
Manufacturer: Canada: maxill inc. St. Thomas, ON N5R 6C8 Canada



REV. 01: 17/11
A00870REV*1117

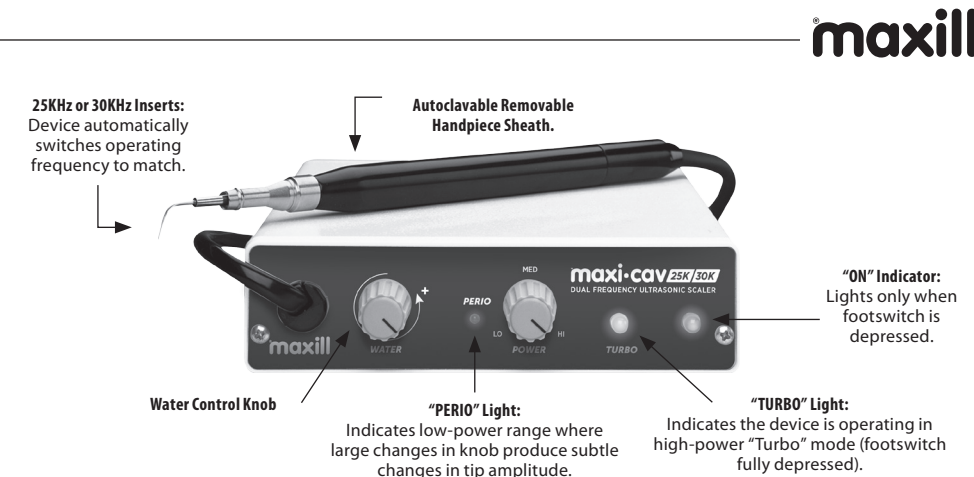

maxill

CLINICAL PRECAUTIONS

- Protect patient’s eyes, lips, cheek, tongue or other vulnerable soft tissues when using this device.
- Protect the patient’s clothing from water damage when using this device.
- Clinicians should wear eye protection and facemask when using this device.
- Water flow through tip during use must be sufficient to cool handpiece and insert.
- Keep the long axis of the insert tip parallel to the long axis of the tooth to wipe deposits from the tooth.
- Do not gouge the tooth with the point of the tip.

INDIVIDUALIZATION OF TREATMENT

If patient or operator is pregnant, or has any medical condition which might be affected by this device during treatment, consult a physician prior to use.

CONFORMANCE TO STANDARDS

The maxi-cav™ is TUV listed and conforms to IEC 60601-1, 60601-1-2 and CAN/CSA C22.2 No. 601.1. maxill’s quality system is certified to ISO 9001/ ISO13485.



The symbol on the scaler indicates the Protective Earth connection.



The symbol or is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the scaler.

SPECIFICATIONS

- Power: 120VAC 50/60 Hz
- Operating temperature: Between 50°F and 100°F (10°C - 38°C)
- Weight: 35 oz.; Size: 1 1/2” H x 5 1/2” W x 7” D
- Handpiece operating frequency: 25 KHz or 30 KHz

ADDITIONAL SPECIFICATIONS

- Protection against electric shock: Class 1, Type B applied part
- Protection against ingress of liquids: Foot Switch & Scaler: IPX1 (drip proof); Power Supply: IPX0 (Ordinary)
- Mode of operation of equipment: Intermittent – 10 minutes on, 5 minutes off
- Operating conditions: 15-30°C, 10-80% RH (non-condensing)
- Transport and storage conditions: 10-40°C, 10-80% RH (non-condensing)

WHAT’S INCLUDED:

- (1) Magnetostrictive Scaler Control Unit with attached handpiece, foot controller and water line (with male quick-connect coupler).
 - (2) Autoclavable sheaths (one attached to handpiece)
 - (2) Inline water filters (one attached to water line)
- (1) Transformer with cable
(1) Operator’s Manual / Instructions for Use

INSERTS


Magnetostrictive Inserts for the maxi-cav™ scaler are available separately, and are not included with the basic scaler unit. However, they may be included in a scaler package that you have chosen to purchase. The maxill maxi-cav™ accepts any 25 KHz or 30 KHz maxill insert. The scaler automatically adjusts the operating frequency to match that of the insert in the handpiece without operator intervention. Brand new inserts may fit very tightly in the handpiece initially, and may be inserted and removed more easily by using a slight twisting motion, and by lubricating the insert O-ring with water. Old, worn or blunt inserts will scale poorly and generate excess heat, and should be replaced when necessary.

INSTALLING YOUR SCALER

Locate the device where the control panel will be easy to reach during scaling procedures, and where the water filter at the rear of the unit may be periodically changed without difficulty. The scaler requires access to a grounded electrical outlet and a source of drinking-quality water. The device and its separate transformer generate a minimal amount of heat. Avoid covering them, to allow normal cooling.

WATER CONNECTION

Before plugging in the device, connect the scaler’s water line to a drinking-quality water supply (15-35 psi optimal), free of sediment. An external, office-wide water filter is recommended to minimize frequent changes of the device’s in-line water filter. The male quick-connect that comes on the end of the water hose is the standard fitting presently used in the dental industry. If you are replacing a scaler that uses an Adec-type or other type of connection, remove the old fitting from the unit hose and attach it to the new water line. Check for leaks at all hose and filter connections before use, and tighten if necessary.

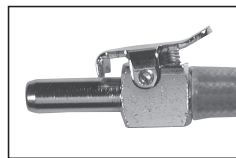


CONTROLLING THE WATER FLOW

Observing the arrow printed on the control panel, turn the water control counter-clockwise to increase the flow, or clockwise to decrease water flow. If water does not flow through the insert when the foot pedal is depressed, the water passage in the scaling insert may be clogged.

ELECTRICAL CONNECTION


The scaler must only be powered via the Transformer Assembly that is supplied with the device by maxill.

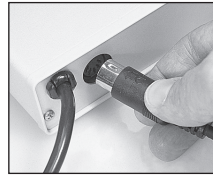

1. Plug the round transformer power cord connector into the back of the scaler, with the arrow on the plug on top.
2. Plug the transformer into a grounded electrical outlet. Stepping on the pedal will activate the scaler.

USE OF AUTOCLAVABLE SHEATHS AND ULTRASONIC INSERTS

1. The maxi-cav™ handpiece is provided with the autoclavable handpiece sheath attached. Prior to use, the sheath should be sterilized. To remove it, hold the handpiece at the base with one hand and turn the sheath counter-clockwise with the other, taking care not to twist the hose. The sheath will unscrew and slip off.
2. To replace the sheath, gently thread it onto the handpiece clockwise, until there is no gap between the two. Take care not to damage or dislodge the O-ring. Do not overtighten.

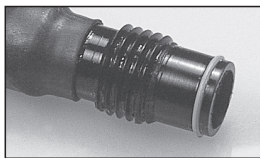

TURNING ON THE SCALER AND CONTROLLING THE POWER OUTPUT

The unit does not have a traditional on/off switch. The foot pedal turns the unit on when depressed, and off when released. **The pedal should be placed where it will not accidentally be pressed when the device is not in use.**

The maxi-cav™ gives you two ways to adjust the scaling power, by using the Power Control Knob for normal operation, or by depressing the Foot Pedal to enter the Turbo Mode.

Use the Power Control Knob to set the initial scaling power for the procedure at hand. Turn the knob in a clockwise direction to increase the power, or counterclockwise to decrease the power.



- Usually, the Power Control Knob is set at the “Medium” setting to start. When the foot pedal is slightly depressed to the first position, the insert will begin vibrating at Medium power.
- If the Power Control Knob is set for the “PERIO” setting, the “PERIO” light will illuminate, and the tip will vibrate at a much a lower power than a traditional scaler when the foot pedal is depressed. This permits very subtle adjustments in tip power, meaning that relatively large movements of the knob produce small increases in power. This allows more comfortable debridement for sensitive patients.
- When the “PERIO” light is not illuminated, tip amplitude reacts more dramatically to knob adjustment for high power calculus removal.

Use the Turbo Mode for short-term increases in power during scaling. Fully depress the foot pedal to the floor using increased foot pressure and the yellow “TURBO” light will illuminate. This will instantly boost scaling power to a point midway between the current setting and the scaler’s maximum power.

- Engaging the Turbo feature at a low power setting causes a significant boost in power.
- Engaging the Turbo feature at high power will produce very little change.
- Since water flow is not affected by Turbo Mode, extended procedures may require a water adjustment.
- Partially lifting your foot off of the pedal will return the scaler to normal, non-Turbo mode.

Note that whenever you fully release the foot pedal, the green “on” light on the front panel will turn off along with the yellow “TURBO” light. This change may take several seconds.

CLINICAL SUGGESTIONS ON TOOTH SCALING

- Ultrasonic scalers should be used by trained, licensed professionals only.
- Inserts and handpiece sheaths must be sterilized before each use.
- Use of face mask by the clinician and high-volume intraoral suction is strongly recommended when operating this device, to avoid inhalation of bacterially-contaminated aerosols.

• DO NOT OPERATE UNIT WITHOUT WATER FLOWING.

- Use the lowest effective scaling power for the case at hand. This keeps heat generation to a minimum.
- Before using the insert in the oral cavity, adjust the water spray following the graphics on the faceplate of the scaler over a sink or cuspidor until desired mist is obtained. For maximum patient comfort, use a good flow of water as a coolant, lubricant and to flush out debris.
- If patient is new to ultrasonic scaling, explain to them what to expect. Usually, the patient should not experience discomfort. If patient experiences uncomfortable heat, adjust power and water controls accordingly.
- Do not test a scaler tip for vibration on your fingers while the unit is operating. This is not a valid test of how scaling feels to the patient.

• Hold the handpiece in a comfortable pen-grasp. To remove deposits from teeth, always use a light brushing stroke with the side of the insert tip, in contact with and parallel to the root surface. Excess pressure will not improve scaling action, but may cause heating and pain to the patient. Keep the scaler insert in motion at all times, using repeated gentle strokes to remove all tenacious deposits.

- Do not use the point of the insert on the tooth surface. You may gouge the tooth.
- Pause occasionally during scaling by removing foot from pedal to evaluate deposit removal.
- Exercise caution near ceramic restorations, as they can discolor or fracture if stressed.

COMMON OPERATOR ERRORS THAT MAY RESULT IN POOR CLINICAL PERFORMANCE

- Failure to keep insert tip parallel to the long axis of the tooth.
- Excessive use of hand pressure.
- Failure to use the lowest effective power setting for the case at hand.
- Insufficient water flow.
- Scaling with the point of the insert instead of the side.
- Inserts are damaged, bent or worn out.

CLEANING AND INFECTION CONTROL

- Consult www.CDC.gov for the “Guidelines for Infection Control in Dental Health-Care Settings”.
- DO NOT AUTOCLAVE the maxi-cav™ control unit, because autoclave heat will destroy it. The control unit should be cleaned of debris with a water-damp paper towel, disinfected by wiping with a registered low to intermediate-level hospital disinfectant,

wiped of disinfectant residue with a water-damp paper towel, and dried. Follow the disinfectant manufacturer’s instructions for use.

- Autoclaving does not remove debris that has accumulated on the sheath or the insert. Failure to adequately remove debris will result in inadequate sterilization. The sheath and ultrasonic insert must be washed in soap and water either manually or in an ultrasonic cleaner, and rinsed in running water prior to bagging them for processing in a steam autoclave.
- Sheaths and inserts may be sterilized in any conventional steam autoclave following manufacturer’s instructions. A typical steam cycle is 250°F-268°F / 121°C-131°C for 30 minutes at a minimum of 15 psi, followed by a 15 minute minimum cool-down period. After sterilization, inspect the device in the autoclave bag for integrity. If suspicion about the item exists, discard it and order a replacement from maxill.
- DO NOT USE DRY HEAT OR CHEMCLAVE on the sheath or the insert.

HOW TO REPLACE THE FILTER DISK

The water filter disk coming off of the rear hose of the unit should be replaced every 3-4 months, or when it becomes dark or clogged with debris so that water flow is impeded. Replacement Filters are available from maxill (Stock No. 81250 – ten per package).

1. Close any water valves, and bleed all water lines of residual water pressure.
2. Disconnect the scaler water supply hose from the water supply at the quick-connect.
3. Remove the old filter disk by holding it in one hand and loosening it by twisting it off the hose connectors on either side. They rotate in opposite directions.
4. Install the new filter disk in the same position as the old one, and tighten the connectors in reverse.
5. Reconnect the scaler water supply hose to the water supply via the quick-connect and check for leaks.
6. Note: If the filter becomes clogged and you do not have a replacement disk, the hose connectors may be locked together TEMPORARILY without the filter disk to allow emergency operation only.

